



Operating Instructions
Precision Lighting Systems

LANDMARK | AREA SERIES



Contact us or visit www.duvonlighting.com

Phone: (224) 567-8312

Email: sales@duvonlighting.com

710 Armstrong Dr., Buffalo Grove, IL 60089

ELECTRICIANS MUST READ PRIOR TO INSTALLATION



- WARNING: RISK OF ELECTRIC SHOCK

- Product must be installed by licensed electrician.
- Product designed for Industrial purpose only.
- Disconnect or turn off power before and during installation.
- Verify that supply voltage is same as rated luminaire voltage.



- WARNING: RISK OF ELECTRIC INJURY

- Wear gloves and safety glasses at all times whilst handling the luminaire.
- Avoid direct eye exposure to the light source while it is on.



- WARNING: RISK OF BURN

- Avoid touching any external surface of the luminaire when in use.
- Allow the luminaire to cool before handling.
- Follow all manufacturer's warnings, recommendations and restrictions.



- CAUTION: RISK OF FIRE

- Keep combustible materials away from luminaire.
- Do not operate in close proximity to persons, combustible materials or substances affected by heat.
- Building insulation must not cover this luminaire.



- CAUTION: RISK OF PRODUCT DAMAGE

- Remove protective film on reflector lens and luminaire.
- If the external flexible cable or plug of the luminaire is damaged, return to manufacturer for repair or replacement.
- Ensure the product is not exposed to heat, chemicals or sharp objects.
- If the product is damaged, contact the supplier for maintenance or replacement to avoid hazards.
- Do not mount or support luminaire in a manner that can cut the outer sheath or damage wire insulation.
- Only use the luminaire in its intended location.



- ELECTROSTATIC DISCHARGE (ESD) :





- ESD can damage LED fixtures. Personal grounding equipment must be worn during.

★ DISCLAIMERS

This product must be installed and used as per these instructions
This product is not suitable for installation in hazardous and/or corrosive areas
This product has been designed to operate in ambient temperatures: -30 °C to 50 °C

INSTALLATION INSTRUCTIONS

★ (REMOTE DRIVE)

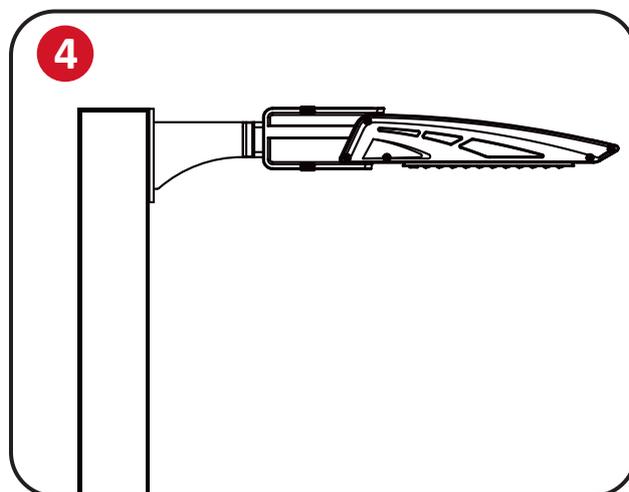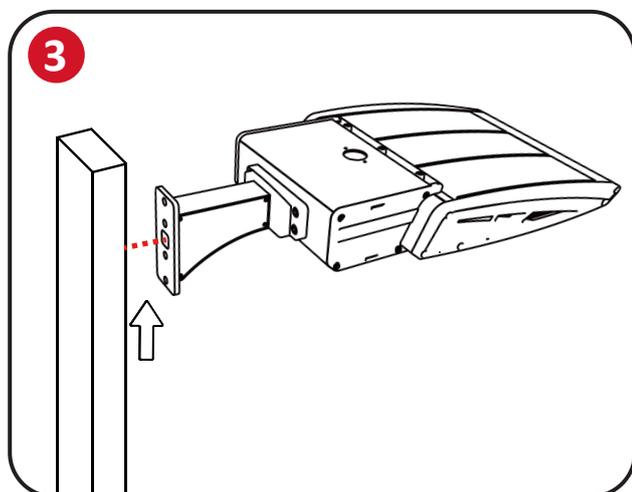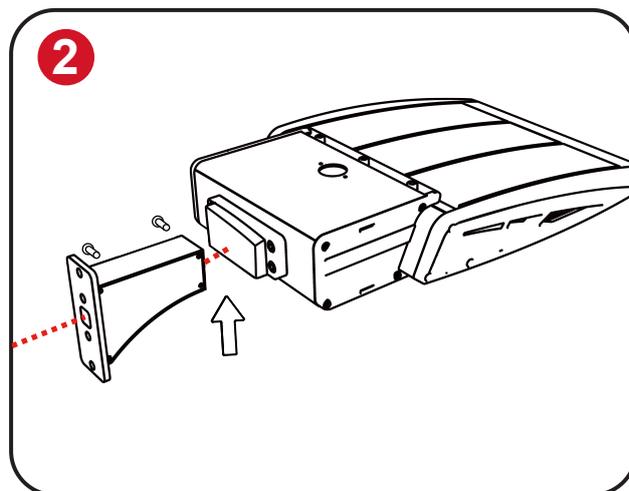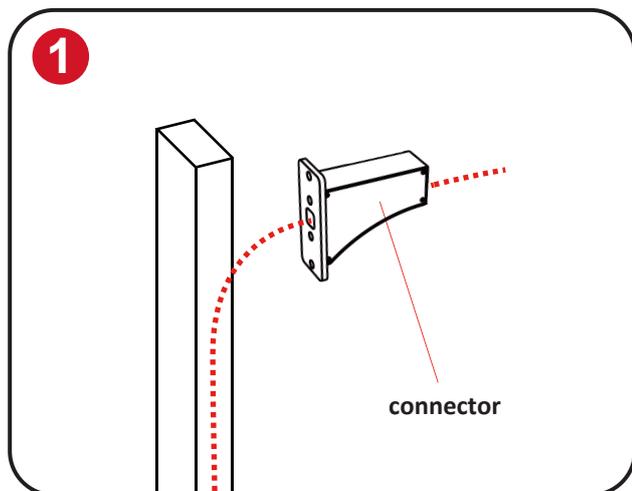

STEP 1:

The wire on the lamp post runs through the adapter. See 1.

STEP 2:

Connect the lamp with the wire through the adapter, then install the adapter on the lamp. See 2.

STEP 3:

Install the adapter on the other side of the lamp on the lamp post. See 3.

STEP 4:

Adjust the lamp to a proper Angle. See 4.